


DP Access Tower - Assembly Instructions – SP0818

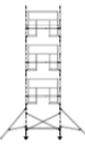

MAX SAFE WORKING LOAD FOR STRUCTURE: 750KG
MAX SAFE WORKING LOAD FOR PLATFORM: 250KG

General Safety Rules



1. Check instructions before use. Mobile access working towers may only be erected and dismantled by persons familiar with these instructions for erection use.
2. Do not use any scaffold tower which is damaged, which has not been properly erected, which is not firm and stable, and which has any missing or damaged parts.
3. Do not erect a scaffold tower on unstable ground or objects such as loose bricks, boxes or blocks. Only a sound rigid footing must be used.
4. Ensure that the scaffold tower is always level and the adjustable legs are engaged. Check that you have taken all necessary precautions to prevent the tower being moved or rolling away. Always apply all castor brakes or use base plates.
5. Ensure that all frames, braces and platforms are firmly in place and that all locking hooks are functioning correctly. Ensure that all frame locking clips are engaged. If any missing, replace them.
6. Outdoor scaffold towers should, wherever possible, be secured to a building or other structure. It is good practice to tie in all scaffold towers of any height, especially when they are left unattended, or in exposed or windy conditions.
7. A scaffold tower must not be used in winds stronger than 7.7 meters per second. Beaufort scale 4. Be cautious if erecting or using the tower in open places, such as hangers or unclad buildings. In such circumstances the wind forces can be increased, as a result of the funnelling effect.
8. Do not use sheeted towers.
9. Do not erect or use a scaffold tower near un-insulated, live or energised electrical machinery or circuits, or near machinery in operation.
11. If an overhead hazard exists, head protection should be worn.
12. Do not lean ladders against the tower or climb the outside of the tower. Whatever your intended access system, it should only be used inside the tower.
13. Never climb on horizontal or diagonal braces. Do not gain access or descend from the working platform other than by the intended access system.
14. Do not work from ladders or stairways, they are a means of access only.
15. Guardrails and toe-boards must be fitted to the working platforms.
16. Never jump on to or off platforms.
17. DO not exceed the safe working load of the platform or structure by accumulating debris, material or tools on platforms as these can be a significant additional load.
18. If you must move a tower, remove all materials and personnel. When moving a scaffold tower, force must always be moved from the base. The tower should only be moved manually on firm, level ground which is free from obstacles. Normal walking speed should not be exceeded during relocation. The ground over which a tower is moved should be capable of supporting the weight of the structure.
19. Should you require additional platform height, add further frames. NEVER extend your adjustable legs to achieve extra height, these are for levelling only. NEVER use a ladder or other objects on the platform to achieve additional height.
20. It is not permissible to attach and use hoisting facilities on towers, unless specifically provided for by the manufacturer.



Maintenance

1. Ensure that the scaffold tower is kept clean, especially the spigots and sockets. These should fit together with ease and be secured by an interlock clip.
2. Check frames and braces, adjustable legs and boards for paint, grit, burrs etc. Remove any foreign substance with a light wire brush. Check no slip hazards exist on the platform.
3. Where brace, ladder and platform hooks attach the frames, ensure that the frame rungs are kept clean.
4. Ensure that all locking hooks function correctly. If necessary, lubricate with light oil.
5. The inside diameter of all hooks should be kept clean to ensure they fit to other components without being forced.
6. If in any doubt about the proper use and maintenance of the scaffold tower equipment, consult the manufacturer.
7. Do not misuse or abuse the scaffold tower with heavy objects, hammers etc. Do not throw components in and out of vehicles or to the ground when the tower is being dismantled. Such abuse may reduce the structural integrity of the scaffold tower.
8. Under no circumstances use a scaffold tower which damaged, has not been properly erected, is it not rigid and which has any missing parts.

REMEMBER YOUR SAFETY DEPENDS ON THE SAFE ERECTION AND USE OF THIS EQUIPMENT.

DP Access Tower – Assembly Instructions


INS – SPO818

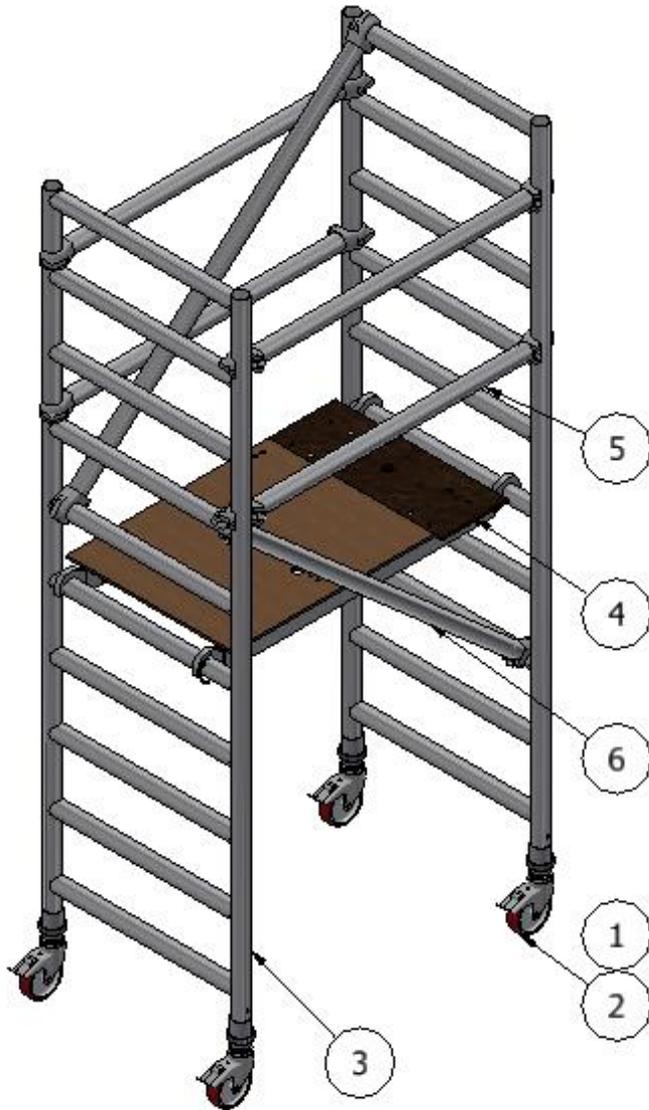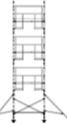

PARTS LIST			
ITEM	ITEM QTY	DESCRIPTION	PART NUMBER
1	4	Tall adjutsable leg with knurled nut	KALL - Knurled Nut
2	4	5" Castor - 38mm Adaptor	K538
3	2	10 Rung SW 232 Frame	FKS5-10
4	1	Klikstak Trapdoor Platform	KSTP
5	4	Kklikstak Horizontal Brace	KSHB
6	2	Klikstak Diagonal Brace	KSDB

DP Access Tower – Assembly Instructions

INS – SPO818

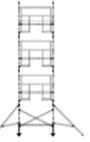


Fit the leg/castor assembly into both frames.




Fit 2 x horizontal braces (KSHB) to one of the frames above the 7th rung, hooks facing outward.

DP Access Tower – Assembly Instructions

INS – SPO818

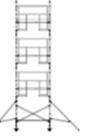


Repeat the previous step on the 2nd frame.

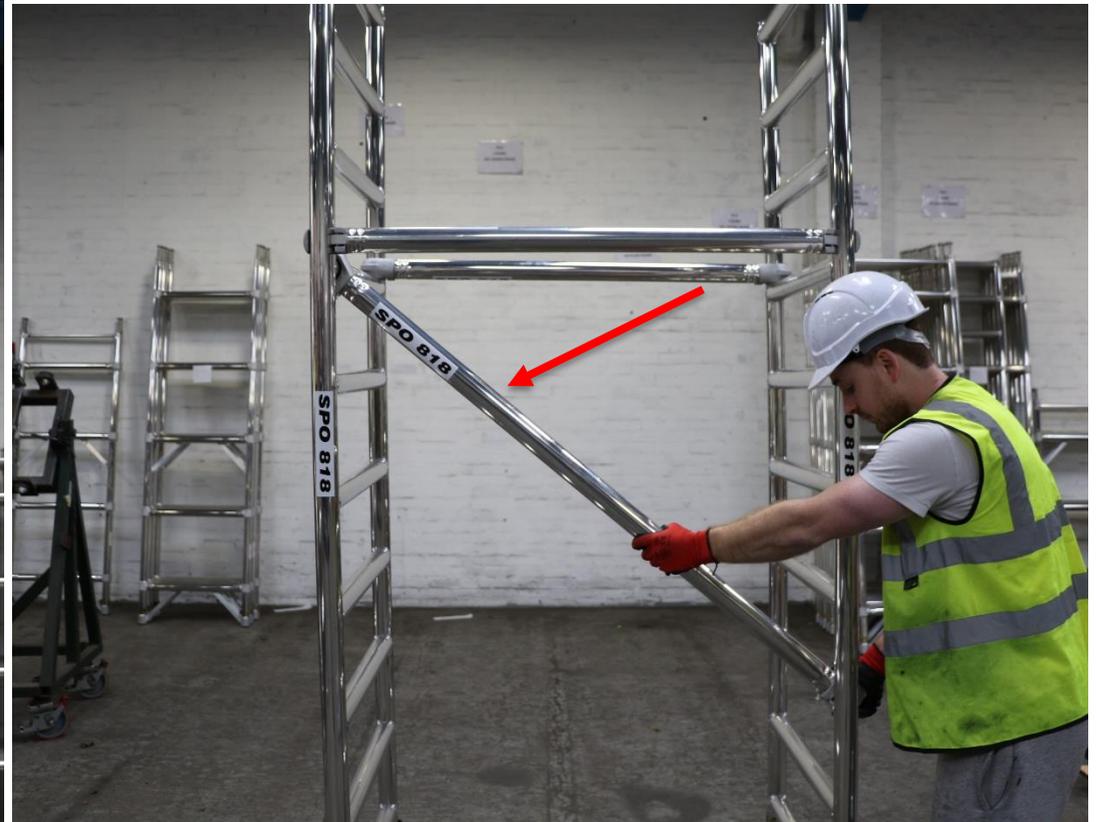

Fit a diagonal brace (KSDB) form the 3rd to 7th Rung.

DP Access Tower – Assembly Instructions

INS – SPO818

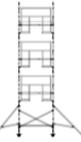


Fit the trapdoor platform (KSTP) to the 5th rung of the frames



Apply all 4 brakes on the castors.

DP Access Tower – Assembly Instructions

INS – SPO818

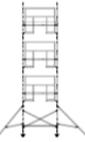


Level the unit with a spirit level, both horizontally & vertically



Sitting through the trapdoor (3T Method) fit the remaining 2 braces below the top rung, hooks facing outward.

DP Access Tower – Assembly Instructions

INS – SPO818

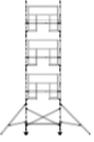


Fit the remaining diagonal brace from the 6th to 10th rung.



DP Access Tower – Assembly Instructions

INS – SPO818

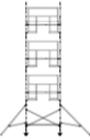

Please read before use

1 Person is required to build this tower

Ensure all parts are present & not damaged before assembling.

Risk assessments shall be done before commencing any work.

*In accordance with the **Working at Height Regulations (WAHR)**, particular attention should be paid to Guardrails; Toe-boards should also be fitted to follow regulation 8a schedule 2 of the Working at Height Regulation.*

- 1. Do not use on unstable ground such as loose bricks, boxes, or blocks.*
- 2. Remove all personnel & materials before moving the unit.*
- 3. When moving the unit, apply force manually at the base of the unit.*
- 4. Do not gain extra height by using boxes, ladders etc on the platform.*
- 5. Ensure the castors are locked before use.*
- 6. Do not overload the unit.*
- 7. Do not overreach out of the unit*
- 8. If there is a risk of high winds overnight then the tower should be reduced in height, this risk should be assessed daily.*
- 9. The tower should be inspected by a competent person before & after any alteration (moving, partial disassembly etc.*
Please see General Safety Rules for wind speed guidance at the beginning of this manual

Manufactured to a TUV Certified ISO 9001:2015 Quality Control System

DISMANTLING NOTES:

- **Always work from the ground**
- **Disengage couplers/hooks before removing any item**
- **Never work from an unguarded platform**

Euro Towers Ltd

Unit 5 Edgemoor close

Round Spinney Industrial Estate

Northampton, NN3 8RG

Tel: 01604 644 774 | Web: www.eurotowers.co.uk



EURO TOWERS LTD